

30 Second Programming Guide ACTsmart2 Pin & Prox (1080)

(For typical Standalone System)

1. Enter Programming Mode.

Press **x** button followed by the programming code (default is 9999)
The LED will flash amber.

2. Add a Batch of Cards

Press 10, then present the first card in the batch followed by the last card in the batch.
Press **✓** button to complete.

3. Add a PIN Code

Press 12, and then enter a 4-digit PIN code.
Press **✓** button to complete.
(*Option 40 - Card or PIN.*)

4. Set Desired Door Relay Active Time

Press 20, and then enter the desired number of seconds from 000-255 (three digits with leading zeros). Press **✓** button to complete. The default time is 5 seconds.

5. Change Programming code

Press 23, then enter new 4-digit programming code. Press **✓** to complete

6. Exit Programming Mode

Press the **x** button. The LED turns red.

The ACTsmart is now ready for normal use.

Note: The ACTsmart2 may be returned to its factory default condition at any time by entering the programming mode and pressing 80 followed by the **✓** button.

For information on programming the advanced features and networking the ACTsmart2 range, please refer to the complete programming guide.

ACT

Access Control Technology

Unit C1, South City Business Centre,
Tallaght, Dublin 24, Ireland.

Tel: 353-1-4662570 Fax: 353-1-4520427 UK Local: 0845 300 5204

Web: <http://www.accesscontrol.ie> E-mail: sales@accesscontrol.ie

Copyright © 2008 Access Control Technology Ltd.