

## 30 Second Programming Guide ACTsmart2 PIN Only (1090)

### 1. Enter Programming Mode.

Press **x** button followed by the programming code (default is 9999)  
The LED will flash amber.

### 2. Add a PIN Code

Press 12, and then enter a 4-digit PIN code.  
Press **✓** button to complete.

### 3. Set Desired Door Relay Active Time

Press 20, and then enter the desired number of seconds from 000-255 (three digits with leading zeros). Press **✓** button to complete. The default time is 5 seconds.

### 4. Change Programming code

Press 23, then enter new 4-digit programming code. Press **✓** to complete.

### 5. Exit Programming Mode

Press the **x** button. The LED turns red.

**Note:** The ACTsmart2 may be returned to its factory default condition at any time by entering the programming mode and pressing 80 followed by the **✓** button.

For information on programming the advanced features and networking the ACTsmart2 range, please refer to the complete programming guide.

# ACT

Access Control Technology

Unit C1, South City Business Centre,  
Tallaght, Dublin 24, Ireland.

Tel: 353-1-4662570 Fax: 353-1-4520427 UK Locall: 0845 300 5204

Web: <http://www.accesscontrol.ie> E-mail: [sales@accesscontrol.ie](mailto:sales@accesscontrol.ie)